




DeLonghi Radiator Installation Guide

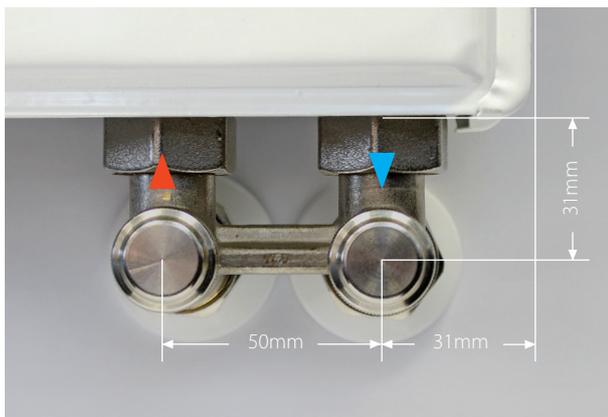

Radiator set out for all models


The flow and return pipes are 50mm apart when measured centre to centre. It is 31mm from the centre of the return to the outside edge of the radiator. (The flow is always to the inside or centre of the radiator.)

NB: Typical install height is 150mm from floor to radiator pipes (181mm to bottom of radiator). Please check height of skirting boards as radiator pipes need to be above skirting. For radiators over 1,800mm, extra mounting brackets should be considered.

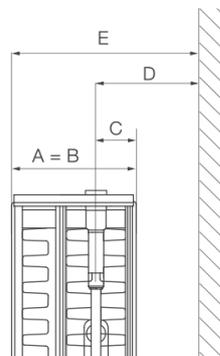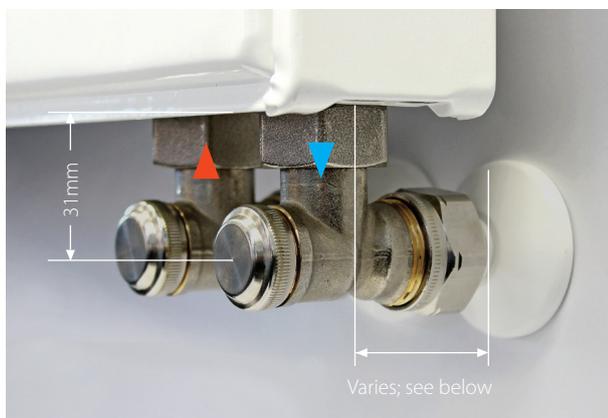

| | | 21 | 22 | 32 | 33 |
|--|---|----|-----|-----|-----|
| Panel depth – excluding back supports | A | 66 | 100 | 157 | 157 |
| Total depth – from the back of the support to the front panel | B | 66 | 100 | 166 | 166 |
| Distance from the back support to the connection* | C | 33 | 50 | 50 | 50 |
| Distance from wall to centre of the connection (mounting the radiators on correct brackets: F7 for models 21,22,32, and 33) | D | 63 | 85 | 85 | 85 |
| Total distance from the wall to the front panel (mounting the radiators on correct brackets; F7 for models 21,22,32, and 33) | E | 96 | 135 | 192 | 192 |

*Calculating the total size of the panel (from wall to the front panel) with the chosen wall brackets; the useful length of the chosen bracket must be added to this measurement.

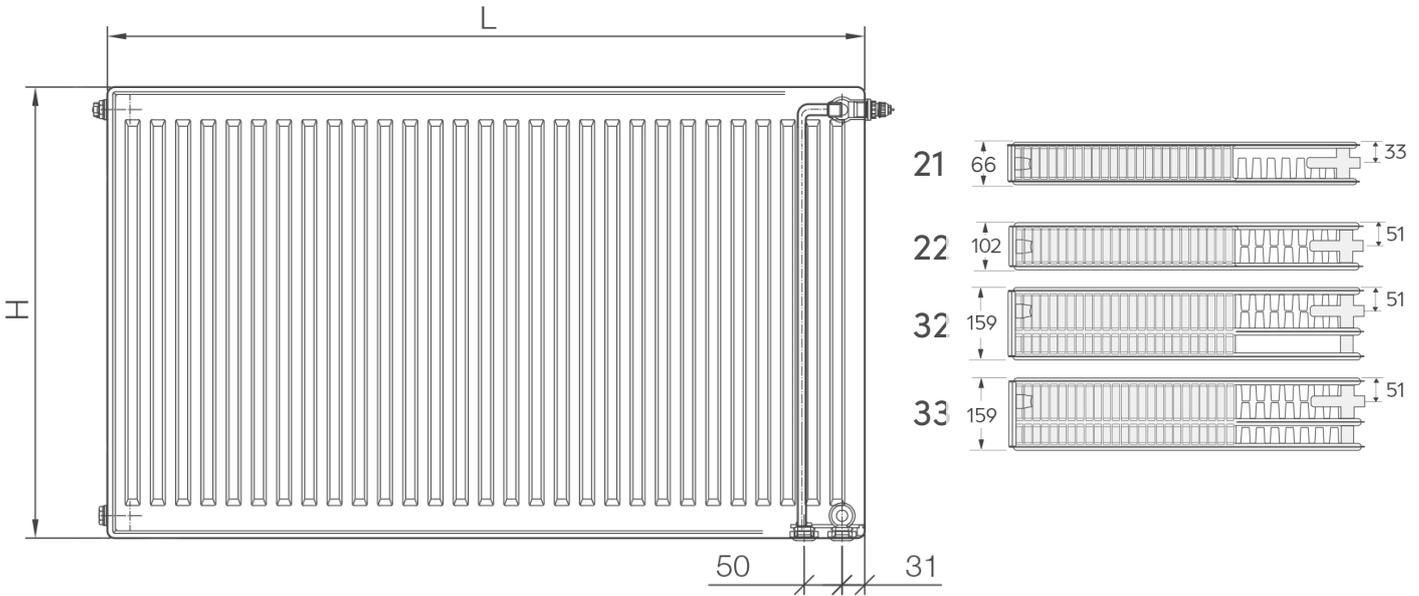


Type 21, 22, 32 and 33 Radiators

Valves: Type 21, 22, 32 and 33 radiators can be installed with the valve on either end (reversible radiators). The flow is always to the inside or centre of the radiator. 21,22, and 33 radiators can be flipped so there is no need to order a different radiator for right hand or left hand connection. Type 32 radiators can not be flipped and must be special ordered with left hand connections (right hand connection is standard).


Mounting: These radiators are supplied with easy-fit brackets. These can be mounted anywhere along the length of the radiator as they simply clip the top and bottom edge.

NB: Wall fixing stud position is flexible but recommend 150mm in from each end of the radiator.

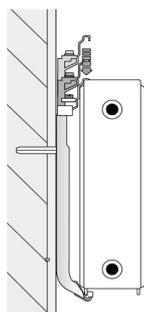

F7 Easy-fit brackets

Valve Block Connection

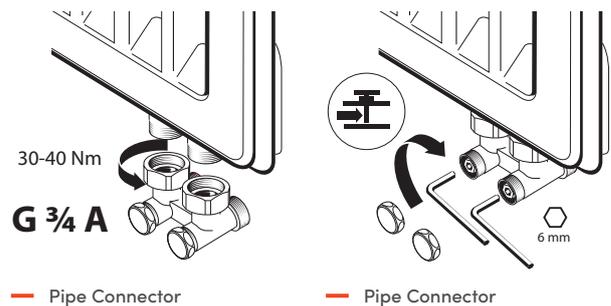

Pipe Connector

Pipe Connector



Copper Pipe Connector

Composte Pipe Connector