
I. Assembly of the manifold:

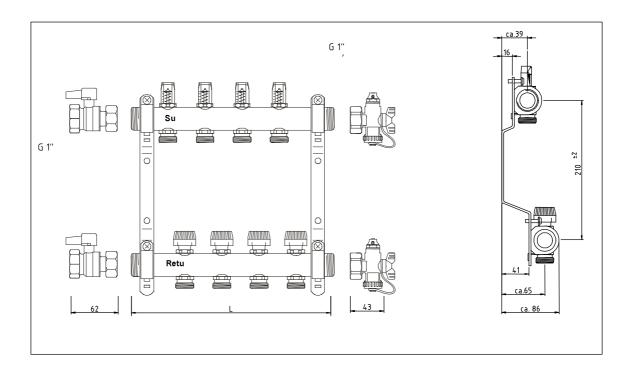

Manifold zones	2	3	4	5	6	7	8	9	10	11	12
Length in mm	190	245	300	355	410	465	520	575	630	685	740

Fasten manifold at the wall. Make sure it is in horizontal position! For the connection of the tubes to the compression fittings (Euro Cone), please take a look at the remarks on the next page.


The screw connection 1" with ball valve 1" and the manifold end set 1" are flat sealed and should be fastened with a fork wrench size 38 mm To fill the manifold, push the hoses over the spouts of the filling valves and clamp them.

The different zones / circuits can be marked with the self-adhesive labels on the manifold pipes.


The manifolds should be checked at a pressure of 8 bar.

WATTS MANIF	OLD REQUIREME	NTS	Watts Manifold Cabinets			
PORTS	Length (mm) Without mixer With mixer		CODE	DIMENSIONS		
2	295	545	UFC0750	750mm x 600mm x 130mm		
4	405	655	UFC0900	900mm x 600mm x 130mm		
6	515	765	UFC1100	1100mm x 600mm x 130mm		
8	625	875	UFC1200	1200mm x 600mm x 130mm		
10	735	985		page 1		
12	845	1095]			


II. <u>Setting of the flow control:</u>

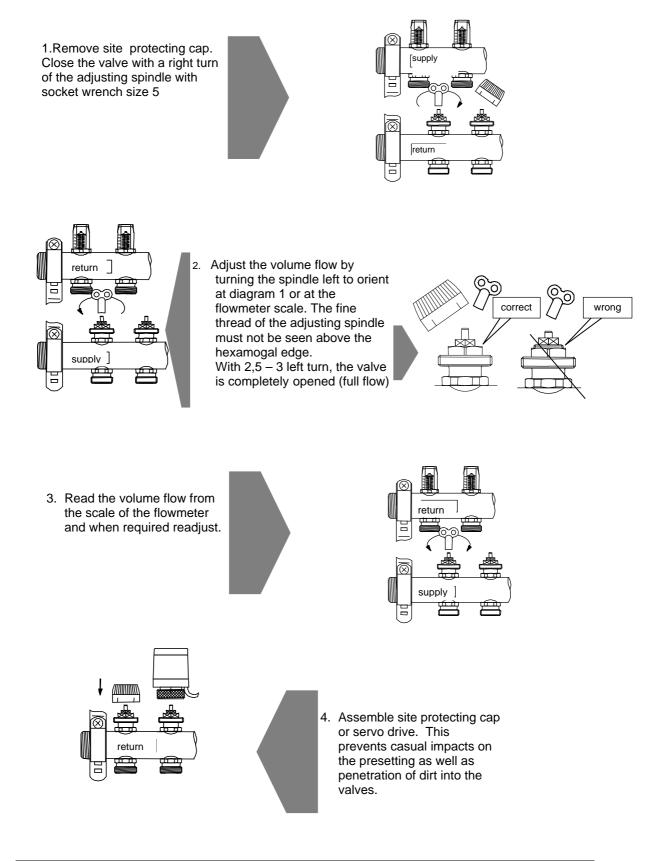

5. When required individual zones can be turned off with the site protecting cap. The presetting remains unchanged!

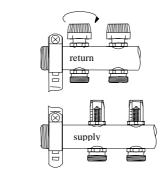

III. Installation of plastic / copper tubes:

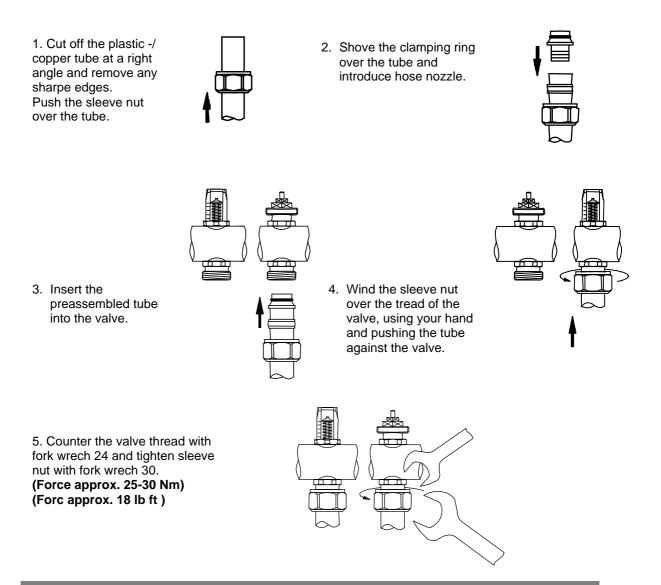

EDV-Nr.: 7002152 Update 03/2004 (subject to technical changes)

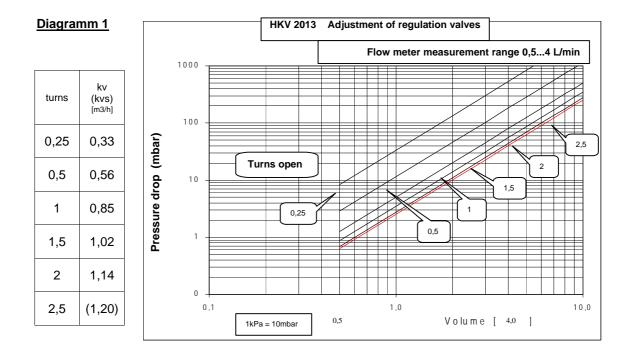


Diagram 2

kvs [m3/h]		
1,20		
2,28		
3,20 3,95		
4,95		
5,20		

