


SAW CUTS & CONTROL JOINTS

Saw Cuts

Crossings of saw cuts to be grouped with localised protection provided at the crossings. Where the pipe does cross under a saw cut, a section of the mesh should be removed before the pipe is laid, the pipe can then be laid lower in the slab in this location and the mesh reinstated once the pipe is laid.

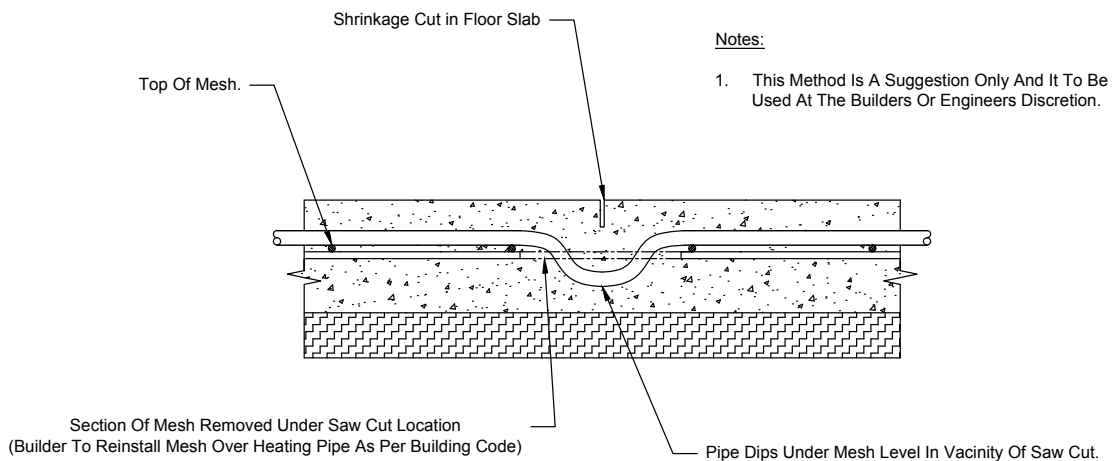

Control Joints

Crossings of control joints shall be grouped as much as possible. Where pipes pass through control joints work with builder to provide a penetration for the pipes through the joint, the pipe shall be sleeved with conduit and taped at each end, conduit to be 200mm each side of control joint.

